

# How to configure vessel inspection period(document)

Users can log in to the website of OLISS, and operate in "Vessel Management → Vessel Inspection" interface according to the following steps 1-4:

1. Click in turn to enter the interface of "Vessel Inspection"

2. Click "Set Vessel Inspection Parameter"

Vessel inspection information that has been set can be viewed through the filter bar

No.	Vessel	Annually Inspection Inspection Date	Intermediate Inspection Inspection Date	Re-certification Inspection Inspection Date	Outboard Inspection Inspection Date	Propeller/Tail Shaft Inspection Inspection Date	Boiler Inspection Inspection Date
1	LINK OCEAN 1	2019-02-18 2020-02-18 2021-02-18 2022-02-18 2024-01-22 2024-04-03	2019-02-18 2023-11-20 2023-11-22				
2	LINK OCEAN 14	2023-09-14 2023-12-14 2024-03-14	2023-09-14 2024-03-14	2023-09-14 2023-10-14 2023-11-14			

## Set Vessel Inspection Parameter

3. After selecting the vessel type you want to configure, click "Edit"

Inspection Content	Pre-tolerance(Day)	Post-tolerance(Day)
检查 运行是否正常, 外观检查	4	5
运行是否正常, 外观检查	6	5
运行是否正常, 外观检查	5	5
外观检查	5	5
运行是否正常, 外观检查	5	5
运行是否正常, 外观检查	5	5



Bulk carrier

Save

4. Fill in the inspection period, inspection content, and tolerance before and after according to the requirements, and finally click "Save"

No.	Inspection Type	Inspection Period(month)	Inspection Content	Pre-tolerance(Day)	Post-tolerance(Day)
1	Annually Inspection	3	检查 运行是否正常, 外观检查	4	5
2	Intermediate Inspection	6	运行是否正常, 外观检查	6	5
3	Re-certification Inspection	1	运行是否正常, 外观检查	5	5
4	Outboard Inspection	12	外观检查	5	5
5	Propeller/Tail Shaft Inspection	24	运行是否正常, 外观检查	5	5
6	Boiler Inspection	6	运行是否正常, 外观检查	5	5